 


Quick Installation Guide

Applicable Model: TL-WA830RE









Option TWO: Your router doesn't support WPS or you are not sure.

Option ONE Quick Setup using the WPS (RE) Button

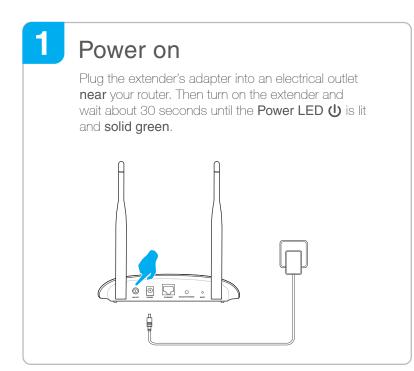

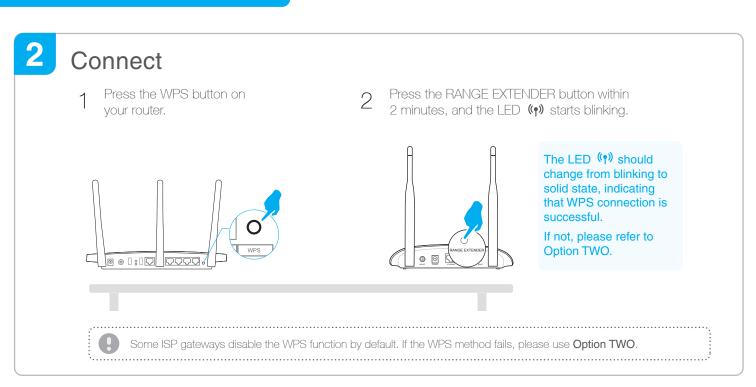

3 Relocate


- 1 Plug in the extender halfway between your router and the Wi-Fi dead zone.
- Wait about 1 minute until the LED (1) is lit with a solid green. If not, relocate it closer to the router to achieve better signal quality.








The extended network shares the **same network name** and **password** as those of your host network.

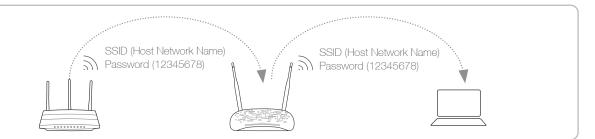

Entertainment Adapter

The extender can be used as a wireless adapter to connect any Ethernet-only device such as a Blu-ray player, game console, DVR, or smart TV to your Wi-Fi network.

First, connect the extender to your router using Option ONE or Option TWO. Then connect your Ethernet-only device to the extender via an Ethernet cable.

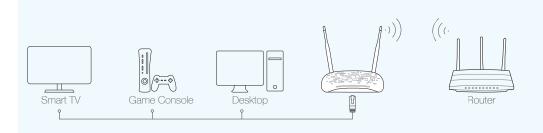

TP-LINK Tether APP



Tether app provides a simple, intuitive way to access and manage your extender with your iOS or Android devices.

 $\ensuremath{\mathsf{NOTE}}\xspace$: AP mode of the extender is not supported by the Tether.



 
Set up the extender

Turn on/off the LED



Modify current settings

Block unwelcome devices




- 1 Download the Tether app from the Apple App Store or Play Store.
- 2 Ensure your device is wirelessly connected to the extender or to the host router.
- 3 Launch the app and start managing your extended network.



Option TWO Quick Setup using Web Browser

Plug the extender's adapter into an electrical outlet near your router. Then turn on the extender and wait about 30 seconds until the Power LED U is lit and solid green.

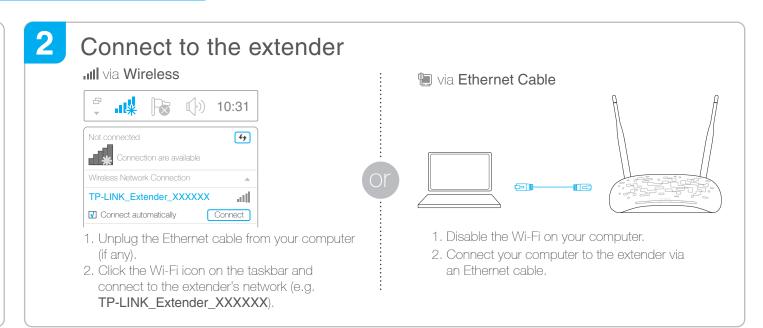


3 Configure


Launch a web browser, type
http://tplinkrepeater.net in the address bar and
use admin (all lowercase) for both Username
and Password to log in.



- If the login window does not pop up, please refer to the FAQ > Q2.
- 4 Either keep the default SSID or customize it for the 2.4GHz extended network. Then click **Next**.

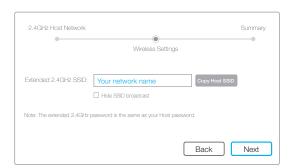

2 Create a new username and password for secure management purpose, and then click **Confirm**.

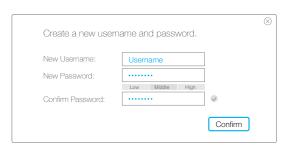

Verify your wireless settings and click **Finish**. Then check the LED.



3 Select your router's **2.4GHz host network**, enter the password, and then click **Next**.



4 Relocate



Flip this piece of paper, and refer to Step 3 of Option ONE.



The extended network shares the **same Wi-Fi password** as that of your host network, but may have **different network name** if you have customized the name during the configuration.

LED Explanation

Blinking green: WPS connection is in process.

Solid green: The extender is connected to the router, and is in a ideal location.

Solid red: The extender is connected to the router, but too far away from the router.

Off: No active connection.

On/Off: The extender is on or off.

Blinking: The extender is initializing.

Characteristic points of the extender of the

FAQ(Frequently Asked Questions)

Q1. What should I do if my router doesn't have a WPS button?

A: Please refer to **Option TWO** to set up the extender.

Q2. What should I do if I cannot access the extender's web management page?

A1: Make sure your computer is connected to the extended network.

A2: Make sure your computer is set to obtain an IP address automatically.

Q3. Why does the LED (१) not change to solid state after I completed Option TWO?

- A1: You may have entered the incorrect Wi-Fi password of your host network during the configuration. Log into the extender's web management page http://tplinkrepeater.net to check the password and try again.
- A2: Reset the extender and go through the configuration again.

Q4. How do I reset the extender?

A: With the extender powered on, use a pin to press the **RESET** button and all the LEDs should turn on momentarily. Then release the button.